

FI Asennusohje
 S Installation instruktioner
 N Installationsinstruktioner
 DK Installationsinstruktus
 NL Installatievoorschrift
 D Montageanweisung
 F Instructions d'installation
 ES Instrucciones de montaje
 I Istruzioni di montaggio

AL0406-P-K Electric Linear Actuator for Modulating Control

INSTALLATION INSTRUCTIONS

A1-A9: Installation

A1


A2

A3


A4

A5

A6

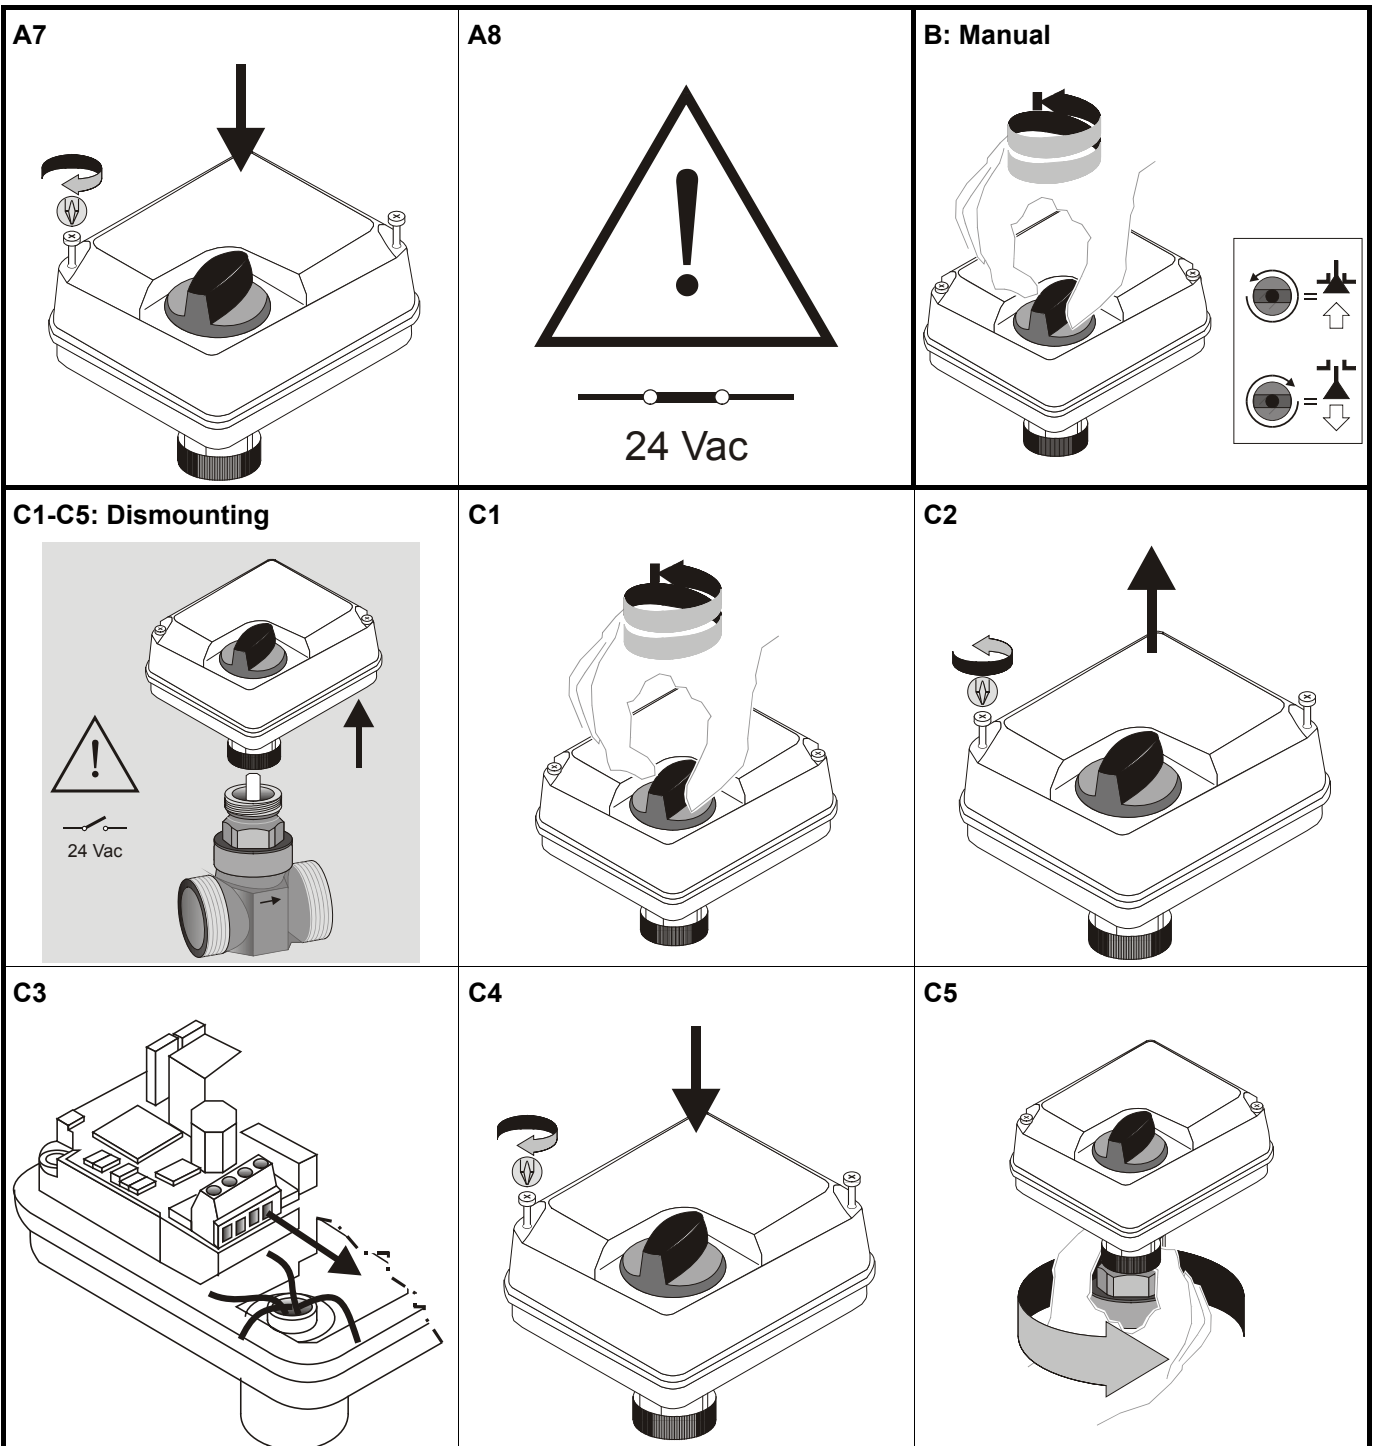

WEEE Directive:



At the end of their useful life the packaging, and product should be disposed of via a suitable recycling centre.
Do not dispose of with normal household waste.
Do not burn.

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative.

Trend Control Systems Ltd reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Trend Control Systems Limited
P.O. Box 34 Horsham, West Sussex, RH12 2YF, UK. Tel: +44 (0)1403 211888, Fax: +44 (0)1403 241608, www.trend-controls.com