

FI Asennusohje  
 S Installation instruktioner  
 N Installationsinstruktioner  
 DK Installationsinstruktus  
 NL Installatievoorschrift  
 D Montageanweisung  
 F Instructions d'installation  
 ES Instrucciones de montaje  
 I Istruzioni di montaggio

## AL0406-P-SU Electric Linear Actuators for Floating/Modulating Control

### INSTALLATION INSTRUCTIONS

#### A1-A7: Installation

#### A1


#### A2

#### A3


#### A4

#### A5

#### A6

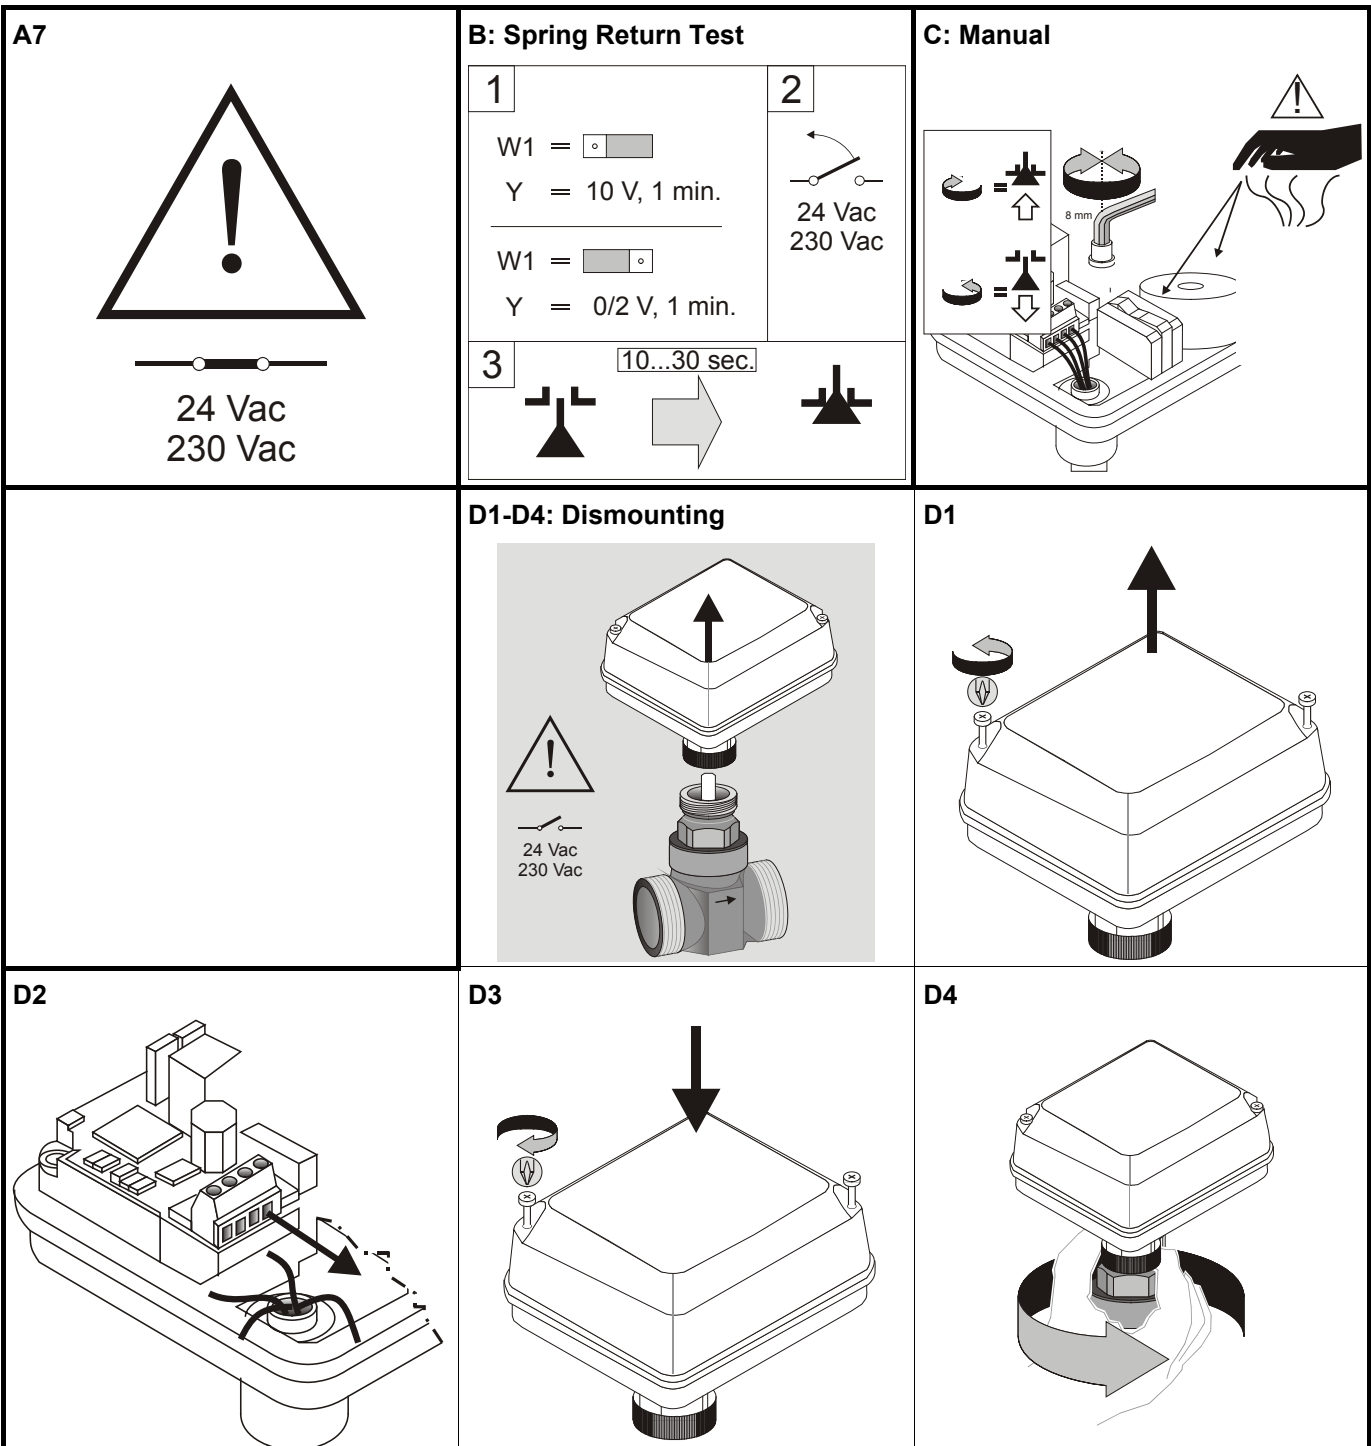

**WEEE Directive:**



At the end of their useful life the packaging, and product should be disposed of via a suitable recycling centre.  
Do not dispose of with normal household waste.  
Do not burn.

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative.

Trend Control Systems Ltd reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

**Trend Control Systems Limited**

P.O. Box 34 Horsham, West Sussex, RH12 2YF, UK. Tel: +44 (0)1403 211888, Fax: +44 (0)1403 241608, [www.trend-controls.com](http://www.trend-controls.com)