


AL0306 Actuator to VB Valve Adaptor Kit

Important: Retain these instructions




INSTALLATION


1 Adaptor Kit

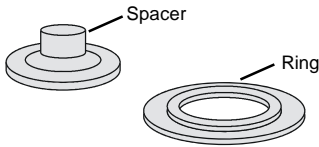


2 Fit Ring to Valve

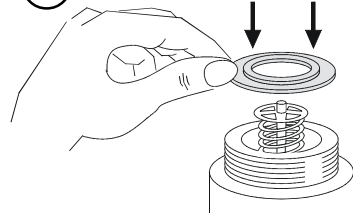


3 Valve with Ring

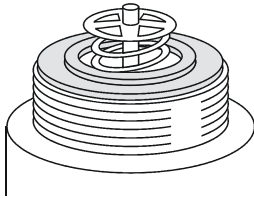

4 Fit Spacer to Actuator

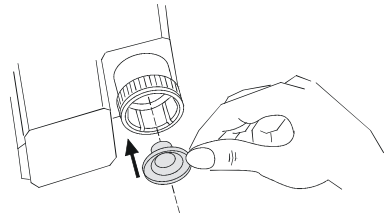

5 Fit Actuator to Valve

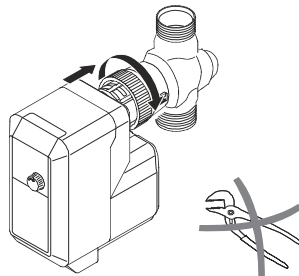

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sàrl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative.

Trend Control Systems Limited reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Trend Control Systems Limited

P.O. Box 34, Horsham, West Sussex, RH12 2YF, UK. Tel: +44 (0)140321888 Fax: +44 (0)1403241608 www.trend-controls.com

Trend Control Systems USA

6670 185th Avenue NE, Redmond, Washington 98052, USA. Tel: (425)897-3900, Fax: (425)869-8445 www.trend-controls.com